

**Kit Contents:**

	FAPMX 002 (2 preps)	FAPMX 010 (10 preps)	FAPMX 020 (20 preps)
PEQ Buffer	30 ml	135 ml	270 ml
PM1 Buffer	42 ml	215 ml	215 ml x 2
PM2 Buffer	42 ml	215 ml	215 ml x 2
PM3 Buffer	42 ml	215 ml	215 ml x 2
PW Buffer	65 ml	270 ml + 60 ml	270 ml x 2 + 120 ml
PEL Buffer	32 ml	215 ml	215 ml x 2
RNase A	4.2 mg	21.5 mg	* 21.5 mg x 2
PMX Column	2 pcs	10 pcs	20 pcs

\* Each tube of RNase A is for adding to each PM1 Buffer individually.

**Specification:**

Technology: Anion-exchange chromatography (gravity-flow column)

Lysate clarification: Centrifugation

Sample Size: 120 ~ 240 ml of bacteria for high-copy number or low-copy number plasmid

Plasmid or constructs range: 3kbp ~ 150kbp

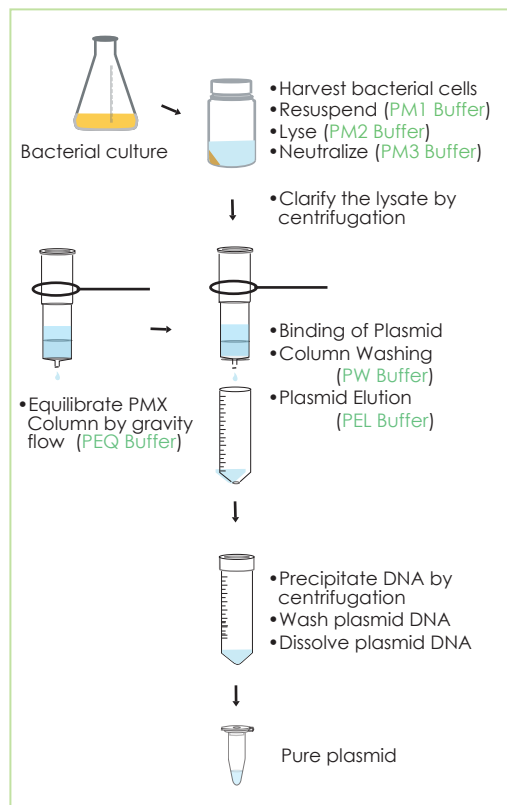
Binding Capacity: 1.5 mg / Maxi Column

**Important Notes:**

1. Store RNase A at -20 °C upon receipt of kit.
2. Add 1 ml of PM1 Buffer to a RNase A tube, vortex the tube to dissolve RNase A well. Transfer the total RNase A mixture back to the PM1 bottle, mix well by vortexing and store the PM1 buffer at 4 °C.
3. If precipitates have formed in PM2 Buffer, warm the buffer in 37°C waterbath to dissolve precipitates.
4. Pre-chill PM3 Buffer at 4 °C before starting.

**Additional Requirements:**

1. 50 ml tubes
2. Refrigerated centrifuge capable of  $\geq 5,000 \times g$  and the centrifuge tube suitable for the centrifuge rotor
3. Isopropanol
4. 70% ethanol
5. TE buffer or ddH<sub>2</sub>O

**General Protocol:**

Please Read Important Notes Before Starting Following Steps.

**Harvest bacterial cells**

1. Harvest the cells by centrifugation at 4,500 ~ 6,000  $\times g$  at 4 °C for 10 min and discard the supernatant.

**Equilibrate PMX Column**

2. Hold a PMX Column above a waste tank.
3. Equilibrate the PMX Column by applying 10 ml of PEQ Buffer. Allow the column to empty by gravity flow and discard the filtrate.

**Cell lysis and lysate neutralization**

4. Add 16 ml of PM1 Buffer (RNase A added) to resuspend the cell pellet by vortexing or pipetting.
5. Add 16 ml of PM2 Buffer and mix gently by inverting the tube 5 times.  
-- Do not vortex to avoid shearing genomic DNA.
6. Incubate the sample mixture for 5 minutes at room temperature until lysate clears.
7. Add 16 ml of chilled PM3 Buffer and mix immediately by inverting the tube 10 ~15 times to neutralize the lysate. (Do not vortex !)

Note: •Make sure the density of cultured cell is optimal, the buffers volume (PM1, PM2, PM3) should be increased proportionally to the culture volume.

(ex. culture volume, 120 ~ 240 ml: PM1, 16 ml; PM2, 16 ml; PM3, 16 ml  
culture volume, 240 ~ 480 ml: PM1, 32 ml; PM2, 32 ml; PM3, 32 ml )

- Make sure cell pellet be suspended completely within Buffer PM1.
- Mix the sample mixture completely after adding Buffer PM2 and Buffer PM3

### Clarify lysate by centrifugation

8. Centrifuge the tube at  $\geq 5,000 \times g$  at  $4^\circ\text{C}$  for 20 min. preferably centrifuge the tube at  $15,000 \sim 20,000 \times g$  at  $4^\circ\text{C}$  for 15 minutes.

-- If the supernatant still contains suspended matter, transfer the supernatant to a clean centrifuge tube and repeat this centrifugation step.

### Binding of plasmid

9. Transfer the supernatant from step 8 to the equilibrated PMX Column. Allow it to flow through the PMX Column by gravity flow and discard the filtrate.

### Wash PMX Column

10. Wash the PMX Column by applying 30 ml of PW Buffer. Allow PW Buffer to flow through the PMX Column by gravity flow and discard the filtrate.

### Elution

11. Hold the PMX Column above a clean 50 ml centrifuge tube (not provided). Add 15 ml of PEL Buffer to the PM Maxi Column to elute the plasmid by gravity flow.

### Precipitate plasmid DNA

12. Add 0.75 volume of room temperature isopropanol to the eluate and mix well by inverting the tube 10 times. (ex: add 11.25 ml isopropanol to 15 ml eluate)
13. Centrifuge the tube at  $\geq 5,000 \times g$  at  $4^\circ\text{C}$  for 30 min. preferably centrifuge the tube at  $15,000 \sim 20,000 \times g$  at  $4^\circ\text{C}$  for 20 minutes.

Note! Make sure that isopropanol be mixed thoroughly with eluate before centrifugation.

### Wash and dissolve plasmid DNA

14. Carefully remove the supernatant and wash the plasmid pellet with 5 ml of room temperature 70% ethanol.
15. Centrifuge the tube at  $\geq 5,000 \times g$  at  $4^\circ\text{C}$  for 10 min.
16. Carefully remove the supernatant and invert the tube on paper towel for 3 minutes to remove residual ethanol. Air-dry the plasmid pellet until the tube is completely dry. (Or incubate the plasmid pellet at  $70^\circ\text{C}$  for 10 min.)
17. Dissolve the plasmid pellet in a suitable volume ( $\geq 300 \mu\text{l}$ ) of TE or ddH<sub>2</sub>O.

Note! • Do not lose the DNA pellet when discard the supernatant.

- Make sure the DNA pellet adhesive lightly on the centrifuge tube.
- If the DNA pellet loose from tube, repeat the precipitation step again.
- Make sure the DNA is dissolved completely before measure the concentration.

## Troubleshooting

### Low yield

Bacterial cells were not lysed completely

- Too many bacterial cells were used.
- After PM3 Buffer addition, break up the precipitate by inverting.
- DNA failed to precipitate or DNA pellet was lost after precipitation.
- DNA pellet was insufficiently redissolved.

### Purified DNA dose not perform well in downstream application

RNA contamination

- Make sure that that RNase A was has been added in PM1 Buffer when first using. If RNase A added PM1 Buffer is overdue, add additional RNase A.
- Too many bacterial cells were used, reduce the sample volume.

Genomic DNA contamination

- Do not use overgrown bacterial culture.
- During PM2 and PM3 Buffer addition, mix gently to prevent genomic DNA shearing.
- Lysis time was too long (over 5 minutes).

Too much salt residual in DNA pellet

- Wash the DNA pellet twice with 70% ethanol.